

SERVICING INSTRUCTIONS

If Balls won't shoot up playing board

1. Check the position of the Metal Spring Actuator (A). Photo #1 below shows the correct position in relation to the Plastic Ball Release (B). If the spring has shifted from the right side of the plastic release to the left side – push all the way down on the playing lever and slide the plastic release over the metal spring actuator.
2. Make sure there are plenty of balls in the Supply Tray (9). Look through the clear plastic window directly to the right of the Feeding Tray Release (5). Is there a metal “block flag” showing in the window? If you do not see this flag then ignore the rest of this paragraph. If you do see this flag, it is the flag that is preventing the flow of balls to the shooting mechanism. You must first open the upper front panel – see instruction #3 – “How to Set Up Your PACHINKO Machine”.
3. Next push down on the Lower Panel Release (C) shown on Photo #2 below. Simultaneously pull the front panel open. Now bend the Flag Wire (D) shown on Photo #3 up and over the plastic edge exactly as shown in Photo #3. This will permanently lock the “block flag” out of the way. Close the bottom door and then the top door. You should no longer be able to see the “block flag” and your machine should be ready to play.
4. As a final solution, re-open the bottom front door – see Instruction #2 above. Squeeze points marked (F) and (G) on Photo #3 below. Simultaneously pull the plastic door open. Check for obstacles within this mechanism.

Photo #1

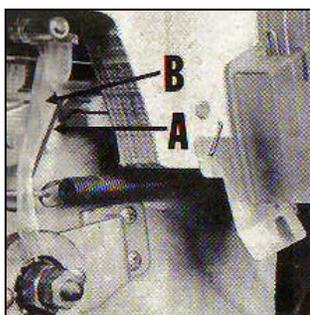


Photo #2


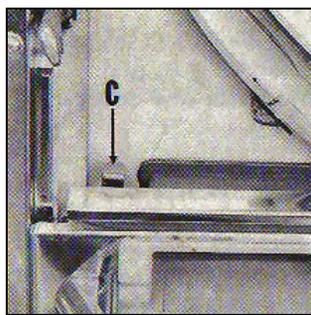


Photo #3

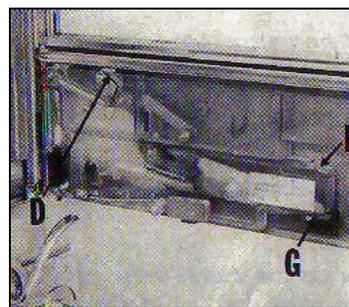

SERVICING INSTRUCTIONS


If the jackpot won't payoff

1. If there are plenty of balls in Supply Tray (9) and the Payoff Locking Devices (15) are swung to the right and are NOT resting on the metal arm directly below them – then it must be concluded that there are balls jammed in the areas marked “J” on Photo #4 below. **MAKE A FIST AND BANG HARD ALL OVER THIS PLASTIC COVERING TO DISLODGE BALLS.** This may have to be done more than once. You should hear them rolling loose and see them backing up in the window marked “O” in Photo #4 below.
2. Now they must be fed out of the machine. This is accomplished by opening the Dump Level (14) on your machine so that the Payoff Lever (17) is able to move freely. Next work the correcting bar (10A) pushing it up each time a ball is dislodged.
3. As the balls roll into the Jackpot Ball Channel (18) pull up on the paper clip shaped wire marked “P” on Photo #4 below. Keep at it. You'll eventually clear out all the balls.

Balls backed up in jackpot on front of machine

1. Follow exactly the same procedure outlined under “If the jackpot won't payoff”.

Photo #4

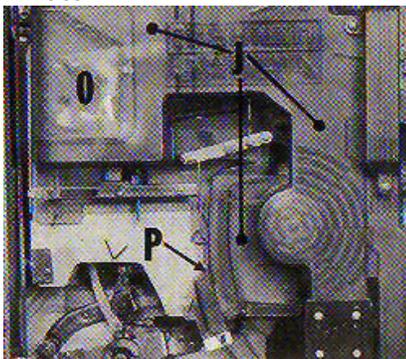

All About Pachinko

PACHINKO! It's the sound. Steel balls springing through gold nail mazes, spinning wheels, falling into jackpots. The noise made by the steel balls as they drop and hit each other at the bottom of the machine sounds like "PA CHIN KO", so the Japanese coined the word PACHINKO for the name of their game.

And PACHINKO is the game of Japan. In fact, it is more like the Japanese national sport.

PACHINKO began in Japan in 1950, and crazily swept through the country faster than its falling steel balls! Today in Tokyo you'll find almost 8,000 Pachinko Arcades – and at least 800,000 Japanese playing at any given moment! In fact, 170 Pachinko Parlours are reserved strictly for children.

What do the Japanese see in PACHINKO? Just one flick of the lever if fun, exciting, and a great way to relieve frustration. It's a relaxing pastime – that tests both your skill and the dexterity of your fingertips. And all you have to do is develop the PACHINKO touch to become a fan!

Your Pachinko Machine

Your machine is neither delicate nor complicated. It is easy for you to figure out how it works by watching the back of the machine as someone plays. We suggest you do this once or twice to familiarize yourself with the machine's operation. This will unquestionably add to your enjoyment of PACHINKO.

THERE IS ONLY ONE RULE YOU MUST ALWAYS FOLLOW – KEEP YOUR MACHINE FULL OF PACHINKO BALLS!

If the face of your machine is different from the one you saw on display or in the ad, do not be concerned. This is part of the fun of PACHINKO – many different playing boards.

Your machine has been manufactured by Nishijin, the largest PACHINKO manufacturer in Japan. It has been removed directly from one of the famous parlours along the Ginza of Tokyo and completely reconditioned by us here in the United States. Less than two years old, your PACHINKO machine has many years of perfect performance left, if you carefully follow the operating instructions inside this booklet.

NO ELECTRICAL SOURCE IS NEEDED TO PLAY PACHINKO. Gravity does the job by pulling the steel balls through the machine. The steel balls thereby activate a series of springs and levers making the PACHINKO perform. The light built into your PACHINKO machine is not set up to operate. This light was

designed to briefly activate when a player hits a jackpot; but since it was designed to operate on 10 volt Japanese wiring system (which is not available in the United States) no provision has been made to activate this system.

CAUTION! DO NOT HOOK UP THESE WIRES TO REGULAR 120 VOLT HOUSEHOLD CURRENT – RESULTS WOULD BE EXTREMELY DANGEROUS!

Rules for Playing Pachinko

There are no set rules or way to play PACHINKO. Follow the simple instructions very carefully – activate the machine and continue to flip the lever until you decide to quit. The Japanese sometimes have five or six balls up on the playing board at one time.

PACHINKO is great at parties! Give each guest 25 balls. Within 60 seconds he must try to accumulate as many balls as possible. The person with the most wins. Or, let the person continue to play until he thinks it's time to stop. The true gambler won't be able to stop until he's cleaned out.

IT'S FASCINATING. IT'S EXCITING. IT'S FUN
IT'S PA CHIN KO – JAPAN'S ALL AMERICAN GAME!